


## TV, DVD, CD & Spa Remote



Choose the source you would like to operate by pressing one of the four buttons marked TV, DVD, CD or SPA

Codes  
 TV - 0180  
 DVD - 0037  
 CD - 0101

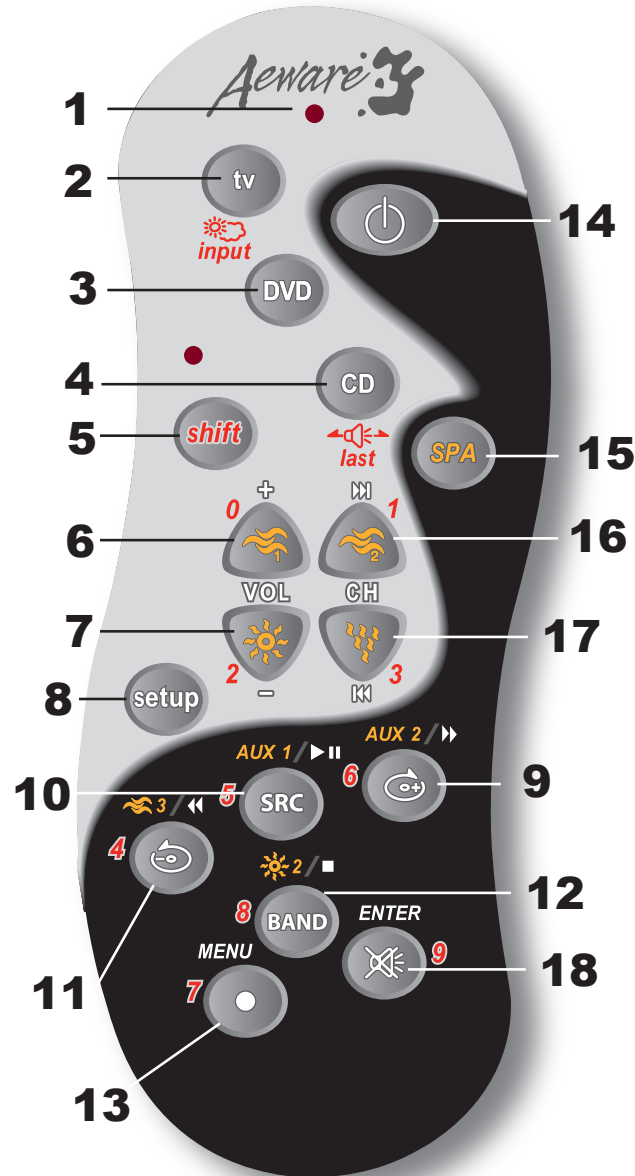

TV	DVD	CD	SPA
1. Indicator Light insures remote is working properly			
2. Press to control TV SHIF + TV selects input.	Source selection AM/FM-DVD-AUX-CD	Source selection AM/FM-DVD-AUX-CD	N/A
3. N/A	Press to control DVD	N/A	N/A
4. N/A	SHIFT + CD Controls Fader	Press to control CD SHIFT + CD Controls Fader	N/A
5. Controls all funtions in RED. Hold then press button			
6. Volume Up	Volume Up	Volume Up	Pump 1 Lo-Hi-Off
7. Volume Down	Volume Down	Volume Down	LED Lights On/Off
8. See user manual code programming			
9. N/A	Chapter Up	Track UP	Speaker Lift UP/Down
10. N/A	Play/Pause	Source AM/FM/CD-AUX	TV Lift Up/Down
11. N/A	Chapter Down	Track Down	Pump 3 Lo-Hi-Off
12. N/A	Stop	CD Stop AM/FM Band	N/A
13. Menu	Press 2x for DVD Menu	N/A	N/A
14. Power On/Off	Power On/Off	Power On/Off	N/A
15. N/A	N/A	N/A	Press to Control SPA
16. Channel Up	Hold FF/ Press Chapter Up	Track Up	Pump 2 Lo-Hi-Off
17. Channel Down	Hold RR/ Press Chapter Down	Track Down	N/A
18. N/A	Select Menu option Menu selection	Mute CD	N/A